

# Installation Instructions

1. Set cold shrink tube on cable or wire prior to connecting.



2. Install connector and clean cable installation.
3. Slide cold shrink tube on connector in a counter-clockwise direction.




4. Hold cold shrink tube and cable in desired position in one hand, pull core gently in counter-clockwise direction with the other hand.



5. Installation complete.

## Installation Cont.

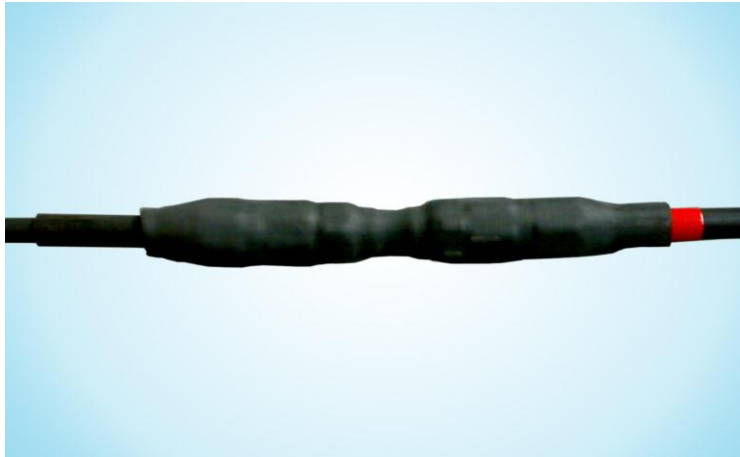

### Applications:

- 1、 Insulation and sealing of inline cable connectors and splices;
- 2、 Repairs of primary electrical insulation rated to 1KV for cable;
- 3、 Environmental sealing for other non-electrical application;
- 4、 For outdoor, indoor and direct burial installation;

### Features:

1. Simple installation, no tools or heat required.
2. Flexible, tight moisture-sealing.
3. Resists ozone and ultraviolet light for outdoor applications
4. Operating temperature range -40 to 85°C.

### Important Notice:

Before utilizing the product, the user should make sure that if the product meets the requirements, and if it needs that the waterproof sealing tape is designed to build up the diameter of the smaller cable. This ensures proper sealing when the product is applied to a connection.