


## 2" CableWrap

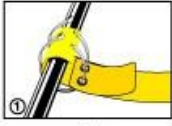

Position CableWrap near male end of cable with fuzzy side facing away from cable. Wrap tightly around cable one and a half times.



Insert a plastic tie through hole closest to cable. Pull over and around cable and thread through eyelet. Pull tight. Repeat with second tie.



Clip off excess tie. The Rip-Tie CableWrap is now anchored in place. Cover Heads of ties in the flap.



Wrap CableWrap tightly around bundled cable with the fuzzy side out until cables are secure. To release, pull the tab.