



EconoCatch




Clean surface with rubbing alcohol or wipe. Peel backing off of EconoCatch.

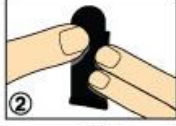

Press hard to surface - the more pressure, the better the adhesion.

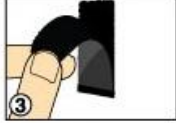

Allow adhesive to cure overnight. Then pull tab down.

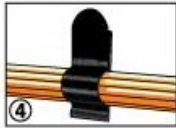

Insert cables and secure.